

ÇS050


CABLE CARRIERS STEEL SERIES

Inner Height (A) 50mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm
<ul style="list-style-type: none"> Both up and bottom parts (bars) are openable Should be used in supporting tray Suitable for low speeds 	ÇS 050 040 R	75-300	50	40	70	80
	ÇS 050 060 R	75-300	50	60	70	100
	ÇS 050 080 R	75-300	50	80	70	120
	ÇS 050 100 R	75-300	50	100	70	140
	ÇS 050 125 R	75-300	50	125	70	165
	ÇS 050 150 R	75-300	50	150	70	190


Maximum working speed :0.5M/S

Radius MUST be given in your orders. Example:

ÇS 050 040 R75

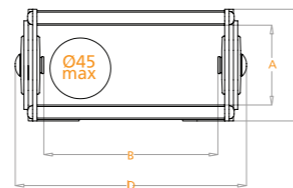

R mm	H mm	X mm	M mm	Y mm
75	75	220	110	385
300	75	670	335	1092

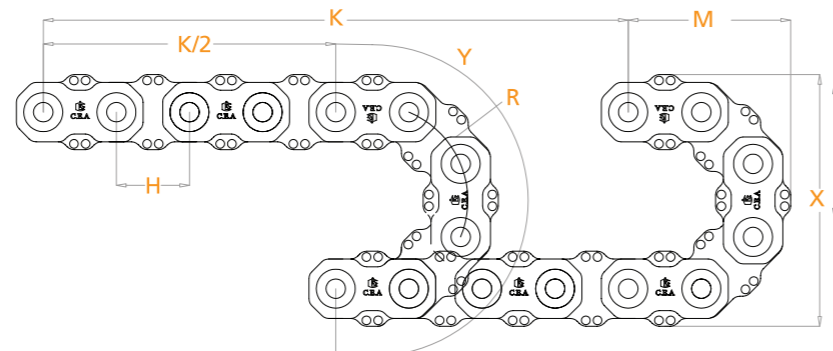

L: Total length to be used


K: Movement distance

Y: Radius

$$L: \frac{K}{2} + Y$$



IMPORTANT POINTS

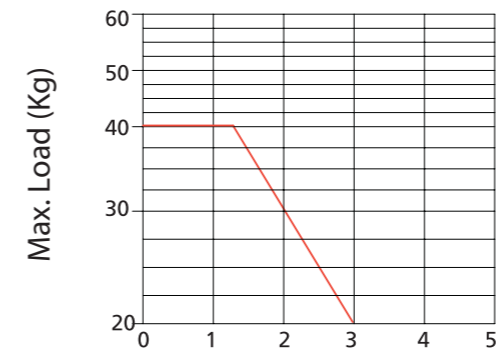


$$\frac{K}{2} \text{ Max. Length without support}$$

Self-supporting Capacity Diagram


Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

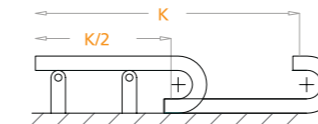

How to use support rollers:


- Special separators can be made upon request
- Can be made by stainless steel material upon request
- Should be used in supporting tray
- Be careful against strong knocks
- Be sure that diameter of hydraulic pipe is max 45 mm.

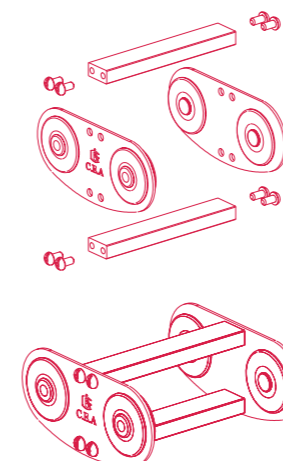

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

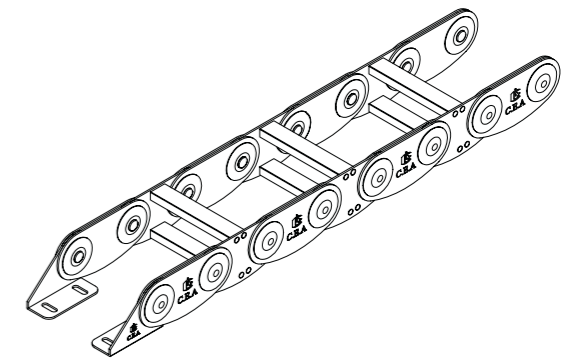

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
ÇS 050 040 R	ÇS 050 040 B01	10	80
ÇS 050 060 R	ÇS 050 050 B01	30	100
ÇS 050 060 R	ÇS 050 060 B01	50	120
ÇS 050 100 R	ÇS 050 070 B01	70	140
ÇS 050 125 R	ÇS 050 080 B01	95	165
ÇS 050 150 R	ÇS 050 100 B01	120	190

