

ÇS150


CABLE CARRIERS STEEL SERIES

Inner Height (A) 150mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm
<ul style="list-style-type: none"> Both up and bottom parts (bars) are openable Should be used in supporting tray Suitable for low speeds 	ÇS 150 200 R	250-1000	150	200	187	260
	ÇS 150 250 R	250-1000	150	250	187	310
	ÇS 150 300 R	250-1000	150	300	187	360
	ÇS 150 350 R	250-1000	150	350	187	410
	ÇS 150 400 R	250-1000	150	400	187	460
	ÇS 150 500 R	250-1000	150	500	187	500


Maximum working speed :0.5M/S

Radius MUST be given in your orders. Example:

ÇS 150 0200 R250

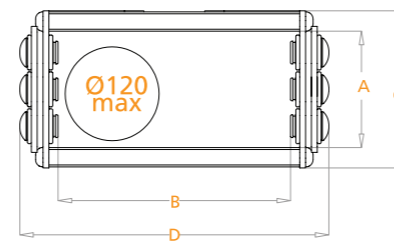


R mm	H mm	X mm	M mm	Y mm
250	180	688	344	1145
1000	180	2188	1094	3500

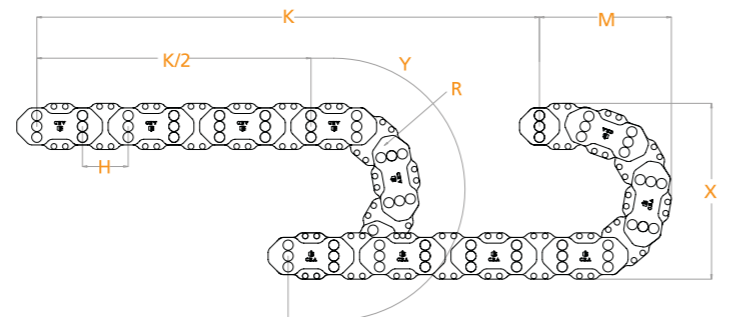


L: Total length to be used
K: Movement distance
Y: Radius

$$L: \frac{K}{2} + Y$$

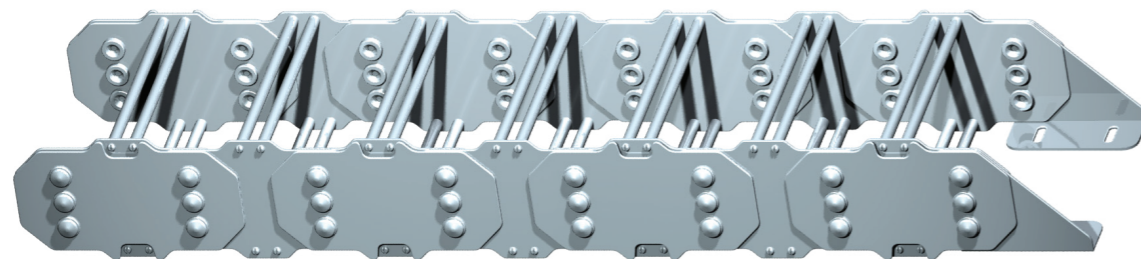

IMPORTANT POINTS

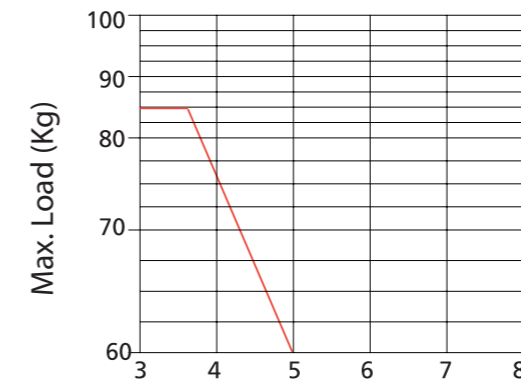


$$\frac{K}{2} \text{ Max. Length without support}$$


Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

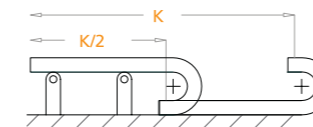


- How to use support rollers:
- Special separators can be made upon request
 - Can be made by stainless steel material upon request
 - Should be used in supporting tray
 - Be careful against strong knocks
 - Be sure that diameter of hydraulic pipe is max 120 mm.

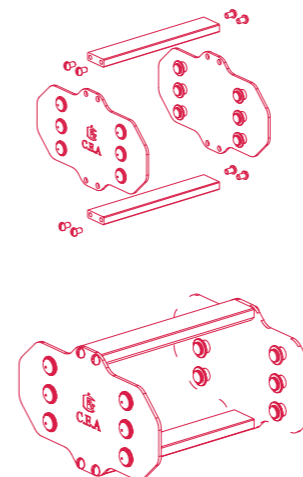

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

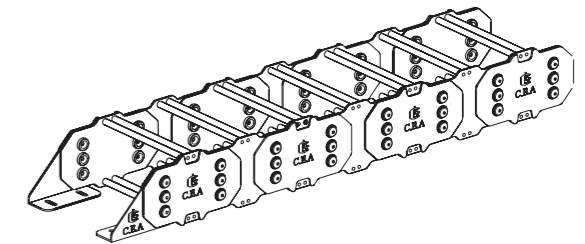

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
ÇS 150 200 R	ÇS 150 200 B01	126	260
ÇS 150 250 R	ÇS 150 250 B01	176	310
ÇS 150 300 R	ÇS 150 300 B01	226	360
ÇS 150 350 R	ÇS 150 350 B01	276	410
ÇS 150 400 R	ÇS 150 400 B01	326	460
ÇS 150 500 R	ÇS 150 500 B01	426	560

