


CABLE CARRIERS HEAVY SERIES


Inner Height (A) 80mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none"><li>• Both up and down sides are openable</li><li>• Suitable for long distances</li><li>• No complete covers (caps) (on both sides)</li><li>• Should be used in supporting tray</li></ul>	SE9 080 R_01	200-250-300-350	80	80	100	120	3.360gr
	SE9 100 R_01	200-250-300-350	80	100	100	140	3.440gr
	SE9 120 R_01	200-250-300-350	80	120	100	160	3.540gr
	SE9 140 R_01	200-250-300-350	80	140	100	180	3.640gr
	SE9 175 R_01	200-250-300-350	80	175	100	215	3.800gr
	SE9 200 R_01	200-250-300-350	80	200	100	240	3.920gr

Maximum working speed :5M/S

Radius MUST be given in your orders. Example: SE9 100 R 200

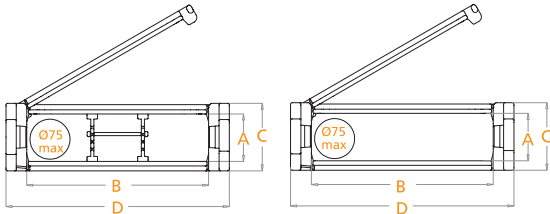


R mm	H mm	X mm	M mm	Y mm
200	100	500	350	828
250	100	600	400	985
300	100	700	450	1142
350	100	800	500	1299

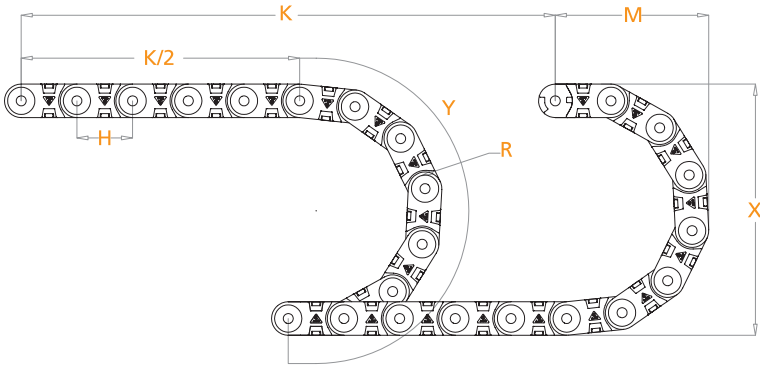


L: Total length to be used  
K: Movement distance  
Y: Radius

$$L: \frac{K}{2} + Y$$

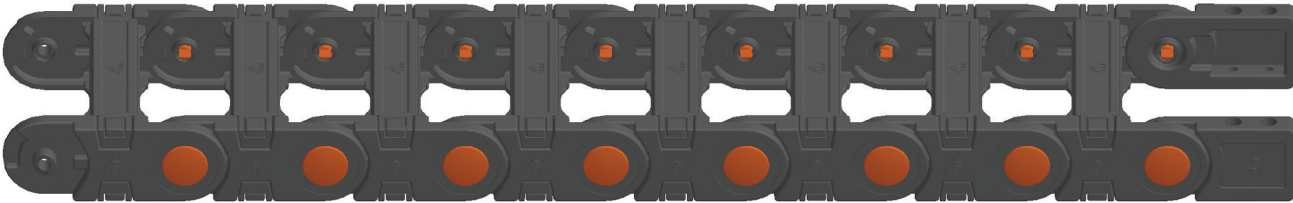


IMPORTANT POINTS

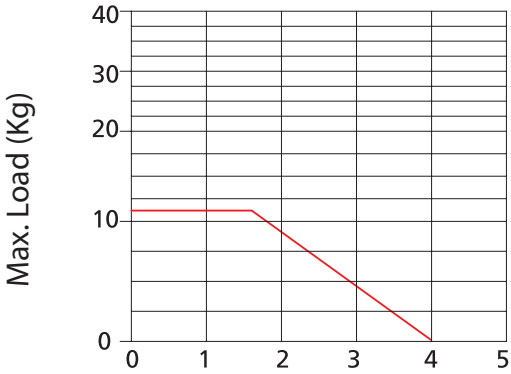


$$\frac{K}{2}$$
 Max. Length without support

Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses  $\frac{K}{2}$

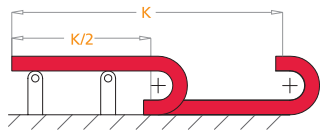


- How to use support rollers:
- Support rollers should be used after 4 meters
  - Make sure that the cap (cover) is fixed properly
  - Use an appropriate hand tool (screw driver) to open the cap
  - Be careful not to damage the fixing nail of the cap (cover)
  - Be sure that side stoppers, used to fix end brackets are fixed properly

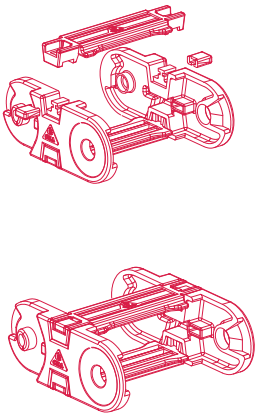

How to choose end bracket

**End bracket**  
End brackets are the parts to be used to fix the cable carrier to the machine or equipment

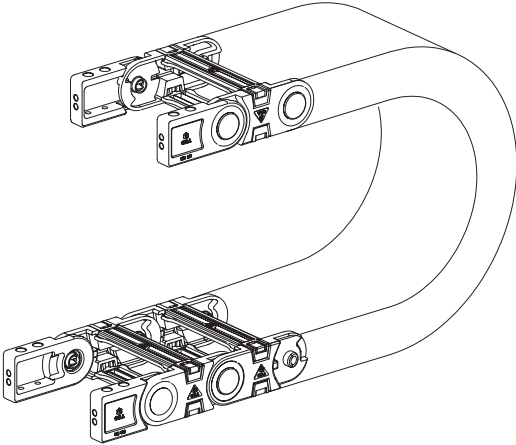

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SE9 080 R01	SE9 B01	100	120
SE9 100 R01	SE9 B01	120	140
SE9 120 R01	SE9 B01	140	160
SE9 140 R01	SE9 B01	160	180
SE9 175 R01	SE9 B01	195	215
SE9 200 R01	SE9 B01	220	240

