


CABLE CARRIERS SLIDING SERIES


Inner Height (A) 85mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none">• One side is fixed, other (radius) side is openable• Should be used in supporting trays• Suitable for long distances, over 4 meters• No complete cover (on both sides)• Suitable to use with separators.	SF1S 080 R_01	150-200-250	85	080	105	120	2.625gr
	SF1S 100 R_01	150-200-250	85	100	105	140	2.730gr
	SF1S 120 R_01	150-200-250	85	120	105	160	2.860gr
	SF1S 140 R_01	150-200-250	85	140	105	180	2.990gr
	SF1S 175 R_01	150-200-250	85	175	105	215	3.198gr
	SF1S 200 R_01	150-200-250	85	200	105	240	3.3550gr

Maximum working speed :5M/S

Radius MUST be given in your orders. Example: **SF1S 100 R_150**

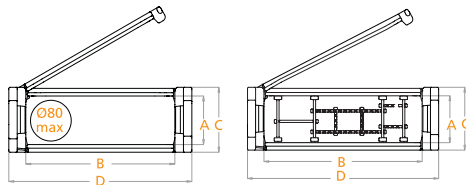


mm	H mm	X mm	M mm	Y mm
150	75	400	257	621
200	75	500	307	778
250	75	600	357	935

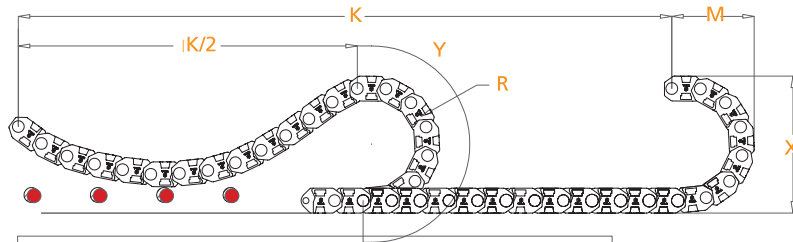


Should be used with supporting tray and rollers.
Code of support roller is ST01

L: Total length to be used
K: Movement distance
Y: Radius

$L: \frac{K}{2} + Y$

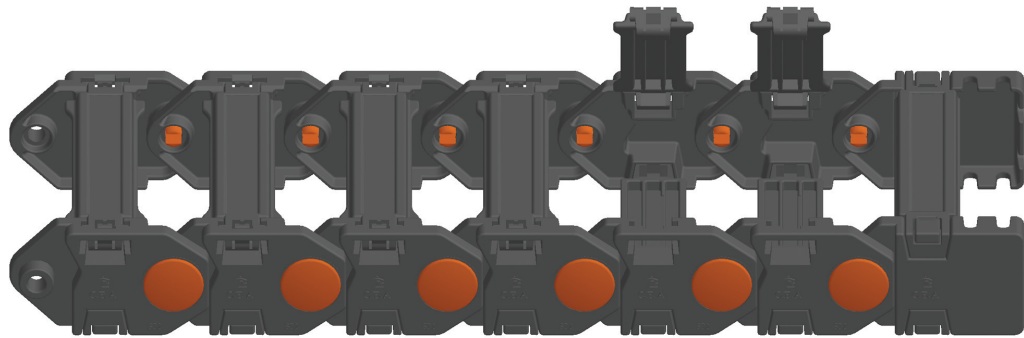

IMPORTANT POINTS

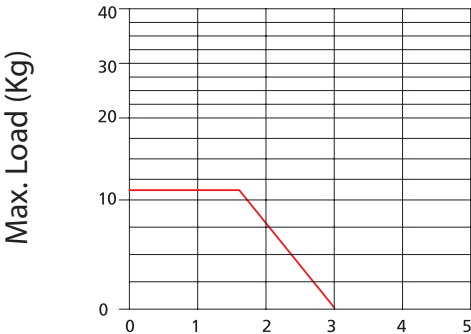


$\frac{K}{2}$ Max. Length without support


Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$\frac{K}{2}$

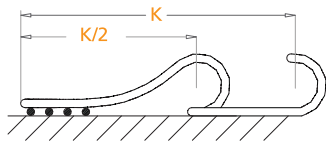


- How to use support rollers:
- Make sure that the cap (cover) is fixed properly
 - Use an appropriate hand tool (screw driver) to open the cap
 - Be careful not to damage the fixing nail of the cap (cover)
 - Be sure that side stoppers, used to fix end brackets are fixed properly

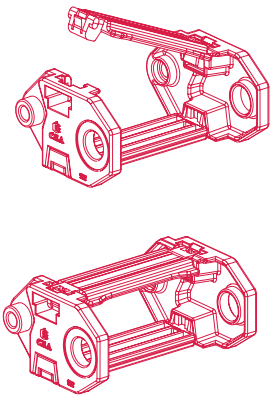

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

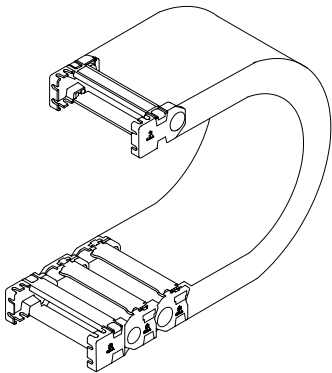

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SF1S 080 R01	SF1 B080	100	120
SF1S 100 R01	SF1 B100	120	140
SF1S 120 R01	SF1 B120	140	160
SF1S 140 R01	SF1 B140	160	180
SF1S 175 R01	SF1 B175	195	215
SF1S 200 R01	SF1 B200	220	240

