

SF1SK


CABLE CARRIERS SLIDING SERIES

Inner Height (A) 85mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none">• One side is fixed, other (radius) side is openable• Should be used in supporting trays• Suitable for long distances, over 4 meters• Both sides have complete covers (caps)	SF1SK 100 R_01	150-200-250	85	100	105	120	2.990gr
	SF1SK 200 R_01	150-200-250-	85	200	105	240	4.160gr


Maximum working speed hızı :5M/S

Radius MUST be given in your orders. Example:

SF1SK 100 R150

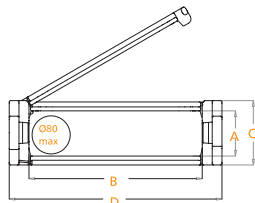


R mm	H mm	X mm	M mm	Y mm
150	75	400	257	621
200	75	500	307	778
250	75	600	357	935

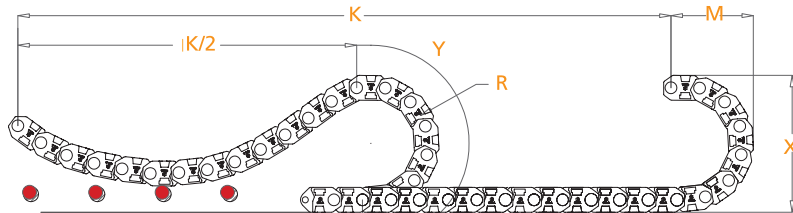


Should be used with supporting tray and rollers.
Code of support roller is ST01

L: Total length to be used
K: Movement distance
Y: Radius
$$L: \frac{K}{2} + Y$$

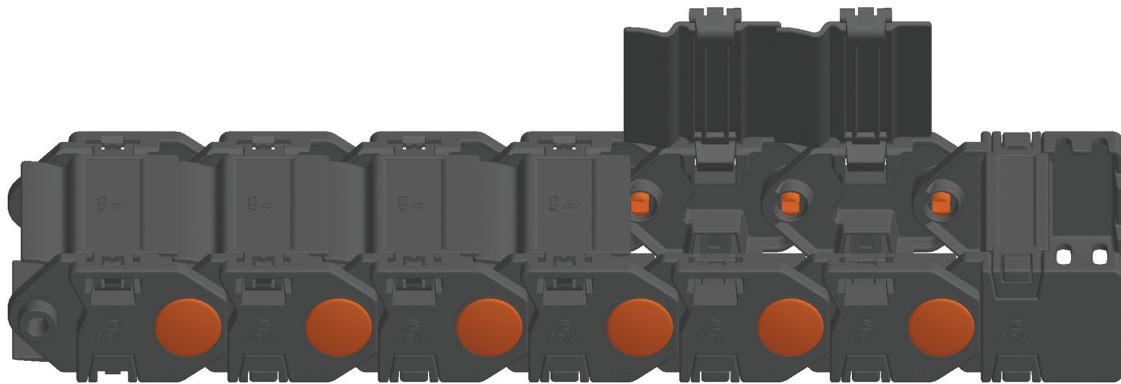

IMPORTANT POINTS

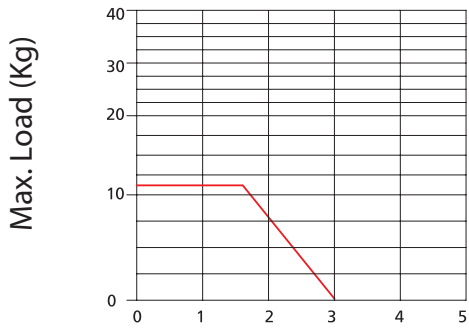


$\frac{K}{2}$ Max. Length without support


Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

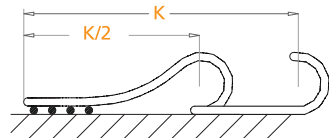


- How to use support rollers:
- Make sure that the cap (cover) is fixed properly
 - Use an appropriate hand tool (screw driver) to open the cap
 - Be careful not to damage the fixing nail of the cap (cover)
 - Be sure that side stoppers, used to fix end brackets are fixed properly

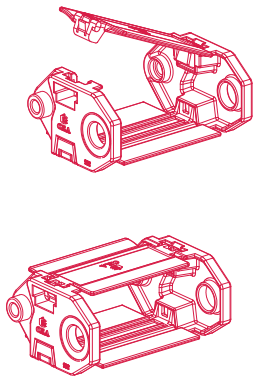

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

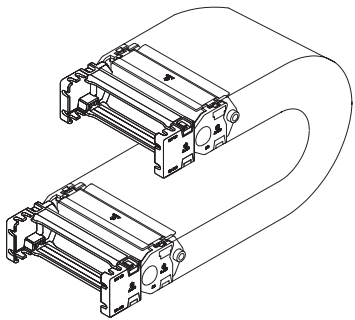

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SF1SK 100 R01	SF1 B100	120	140
SF1SK 200 R01	SF1 B200	220	240

